



THE MACHINE DRILL / PEDESTAL DRILL

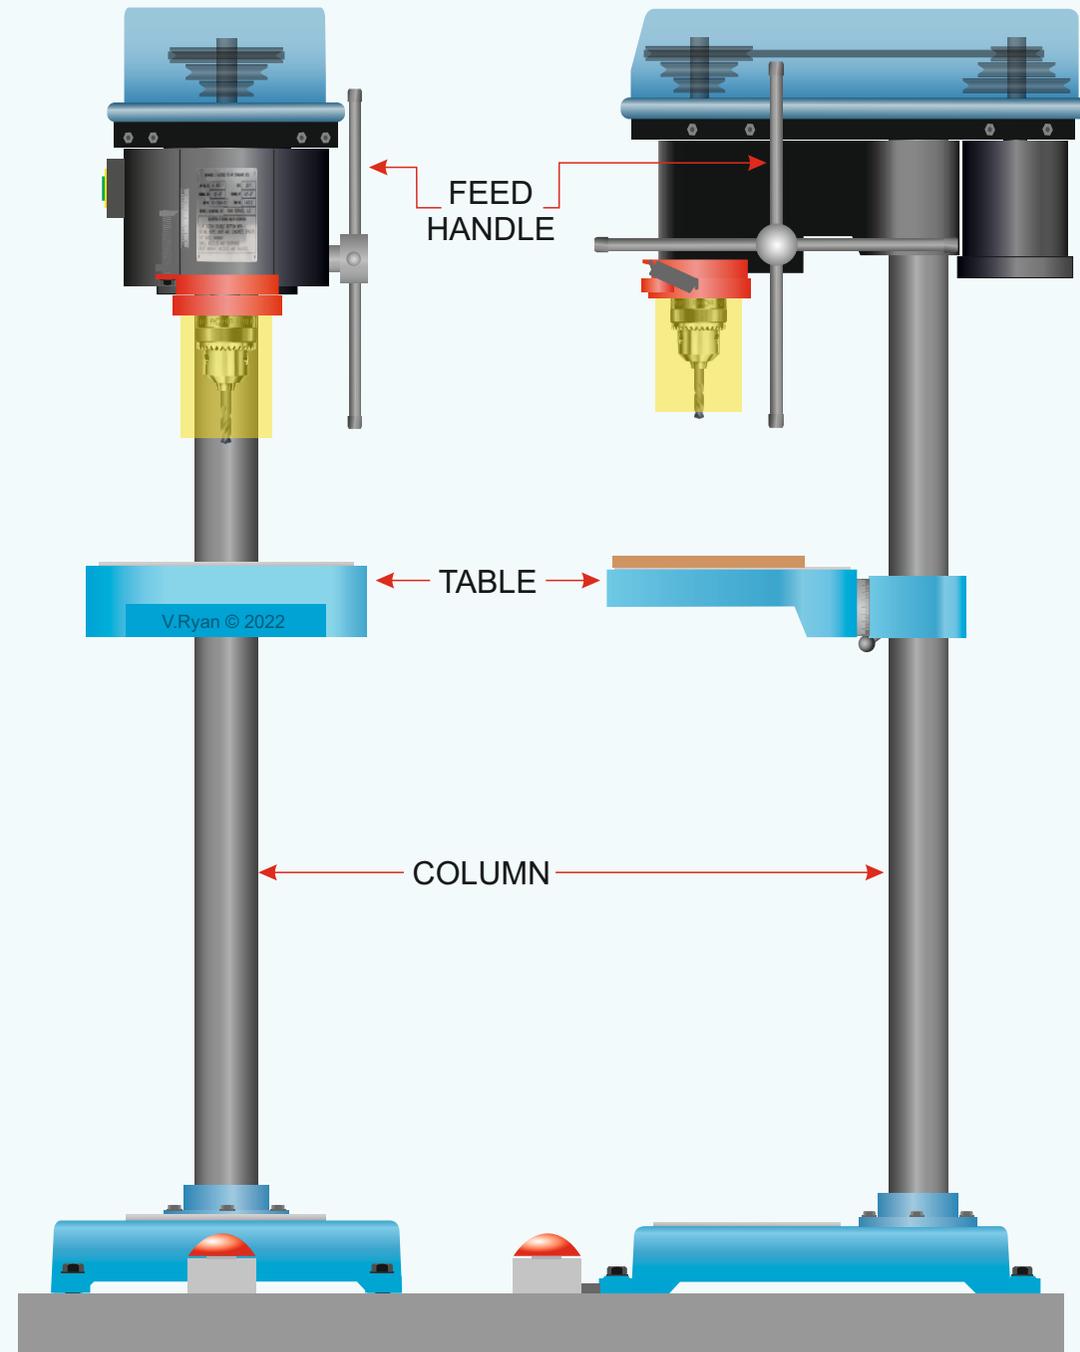

THE MACHINE DRILL / PEDESTAL DRILL

HEAVY DUTY
MACHINE VICE

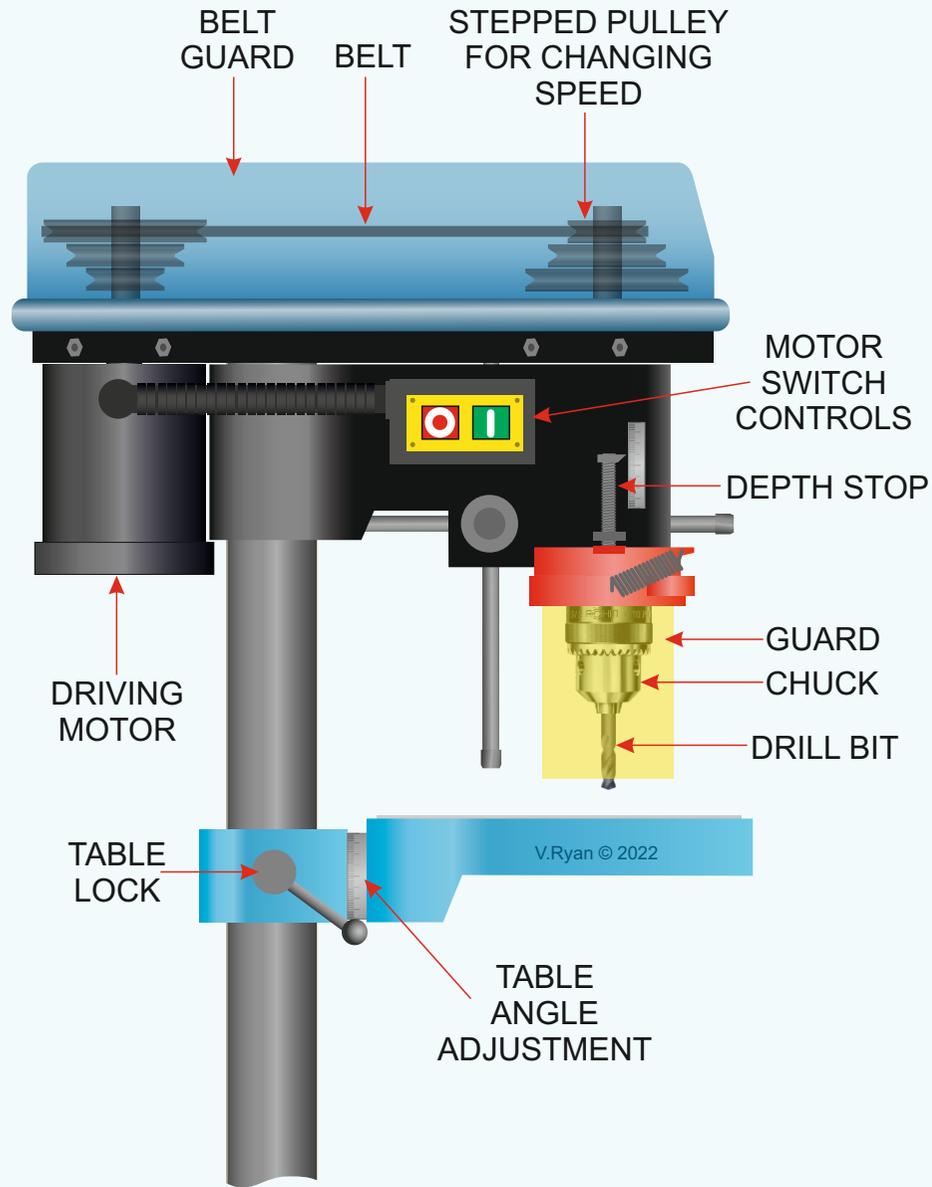




MEDIUM DUTY
MACHINE VICE




LIGHT DUTY
MACHINE VICE



SLOTS FOR BOLTS

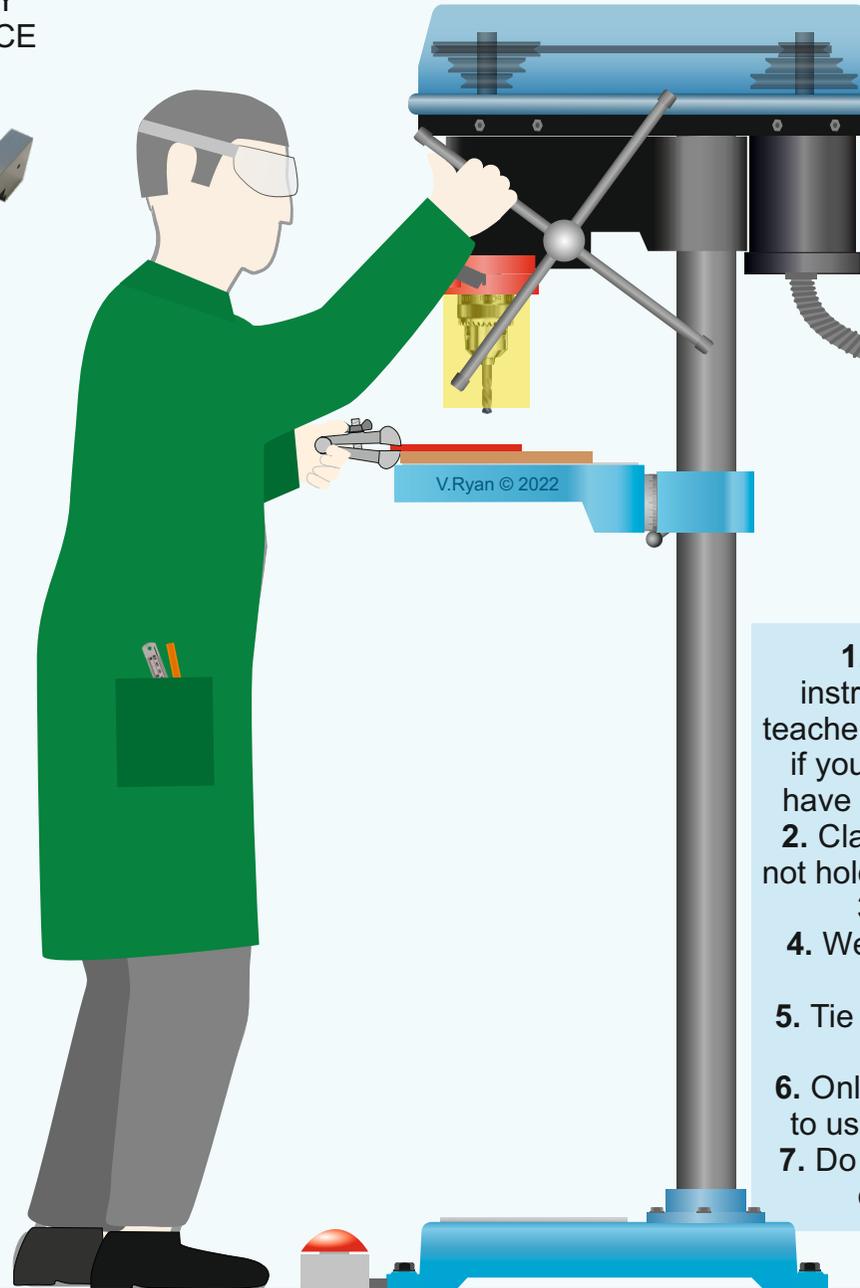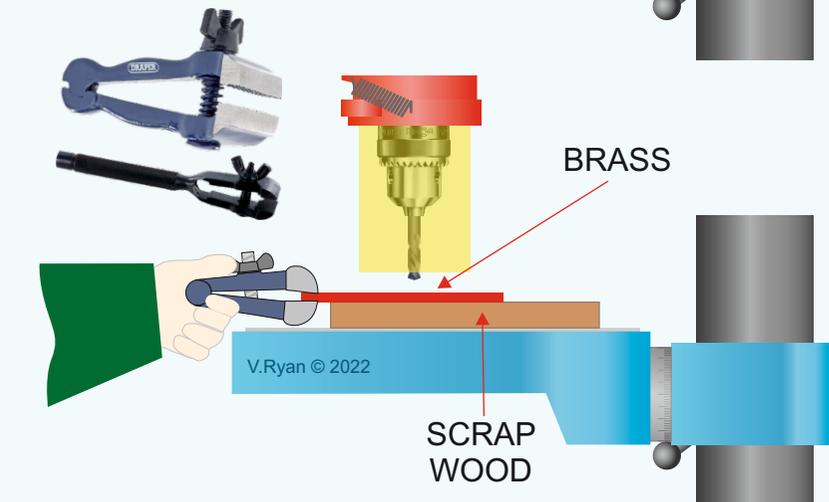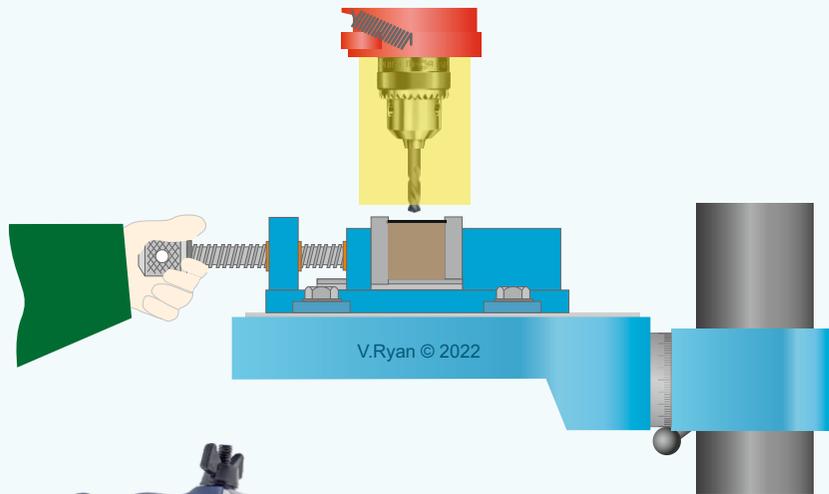


ISOLATOR
SWITCH

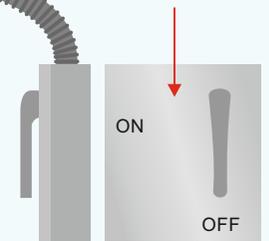

1. Always follow the instructions given by your teacher. (only use the machine if you have permission and have been trained to use it).
2. Clamp the work down, do not hold the work in your hand.
3. Use the guard.
4. Wear safety clothing and footwear.
5. Tie back long hair or use a hair net.
6. Only one person at a time, to use the drilling machine.
7. Do not distract the person operating the drill

THE MACHINE DRILL / PEDESTAL DRILL

The rack and pinion table adjustment, allows the user to lower or higher the machine table with ease. Simply rotate the handle to move the machine table up or down. The machine table is then locked in position.

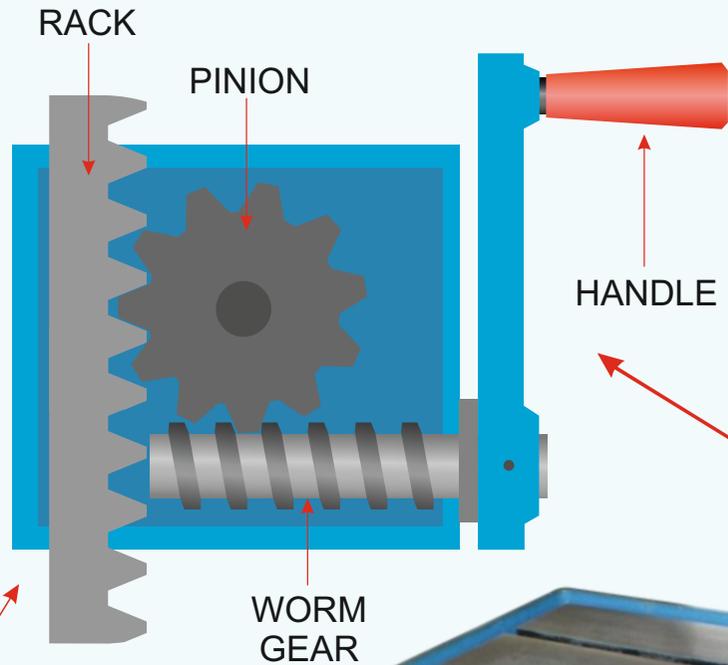

Rotating the handle, rotates the worm gear. The worm gear meshes with the pinion gear, which rotates. The pinion gear meshes with the rack, moving the machine table either up or down.

