




THE VACUUM FORMER

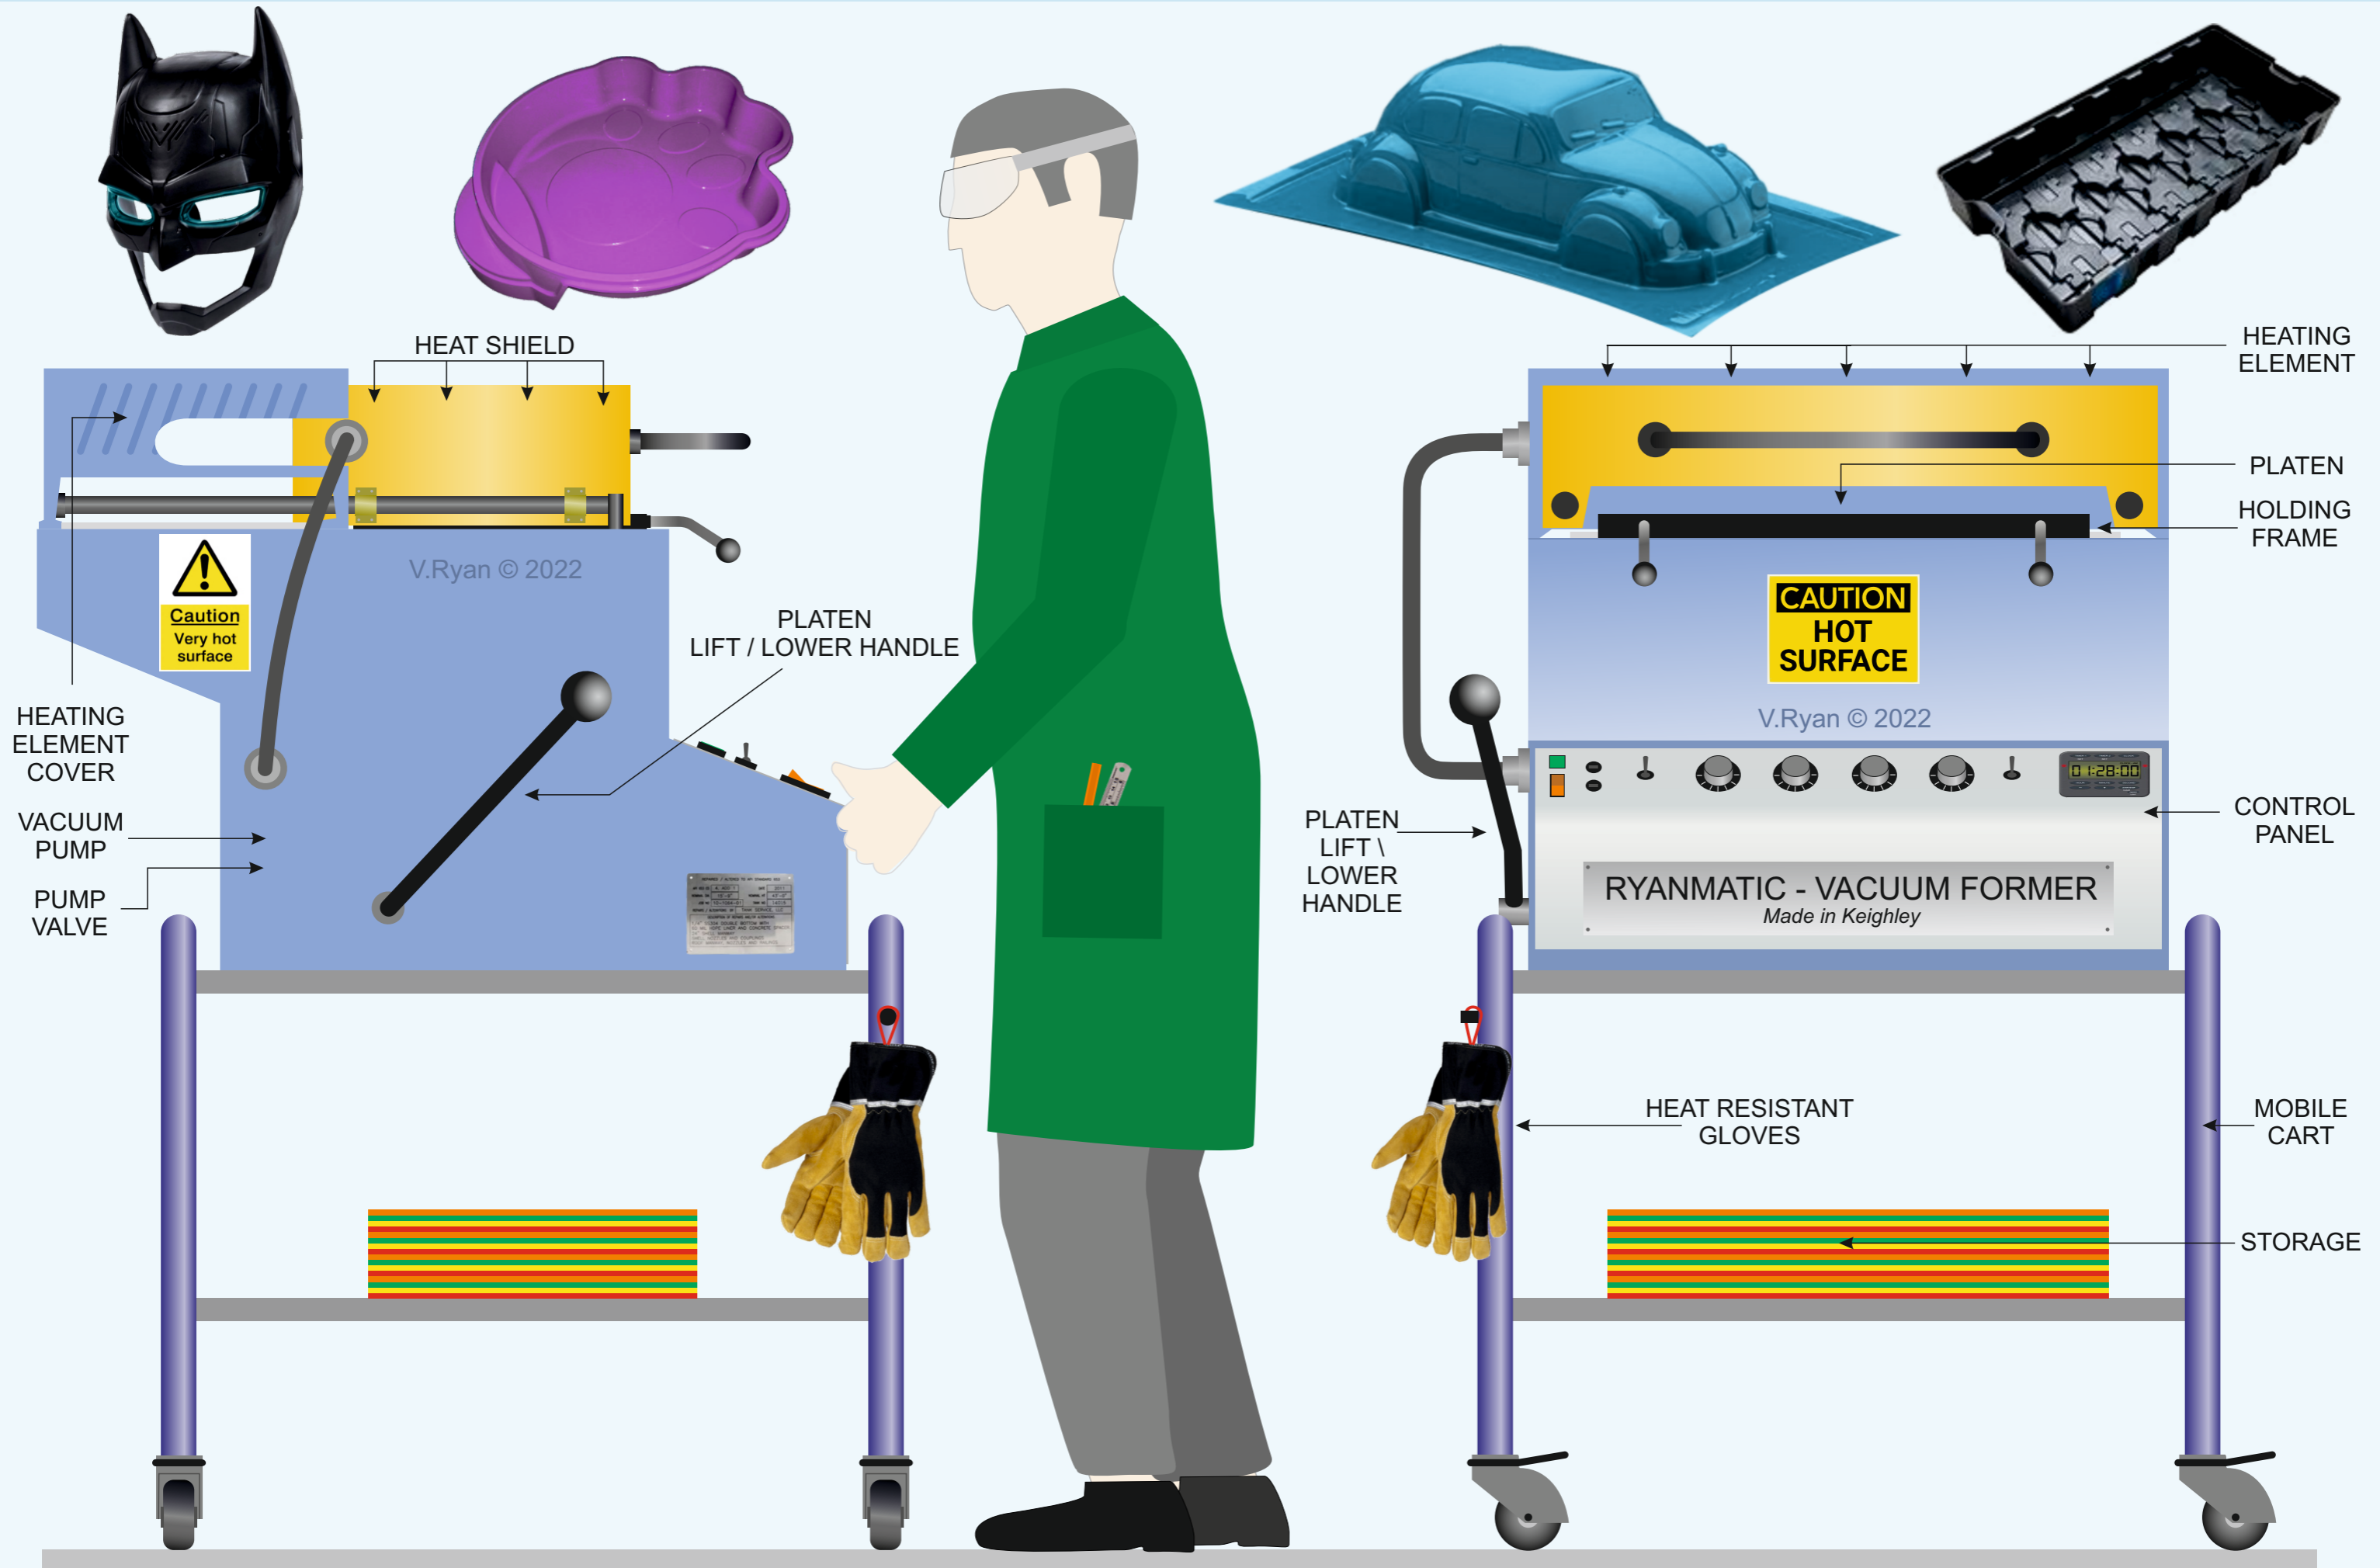


THE VACUUM FORMER

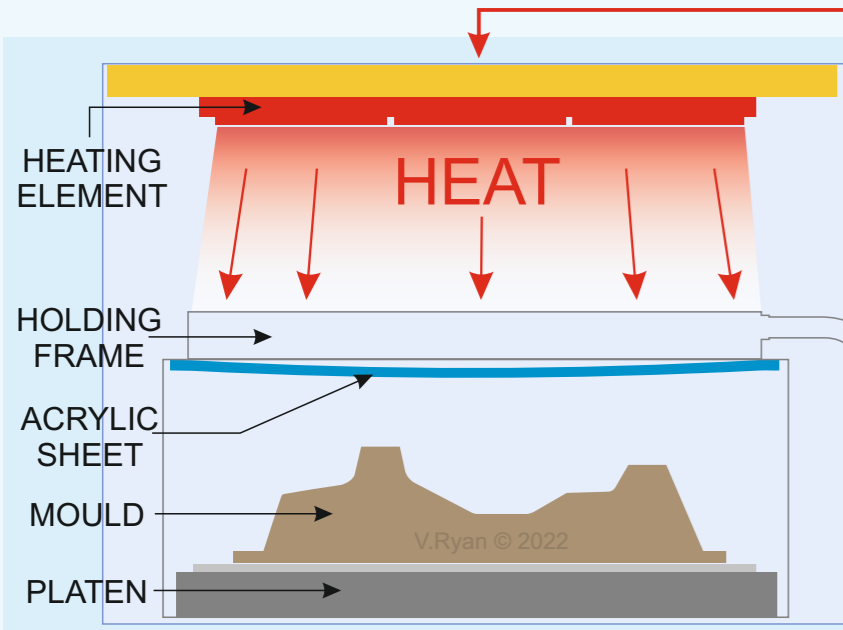


STAGE ONE
ACRYLIC HEATED UNTIL
PLIABLE / FLEXIBLE.

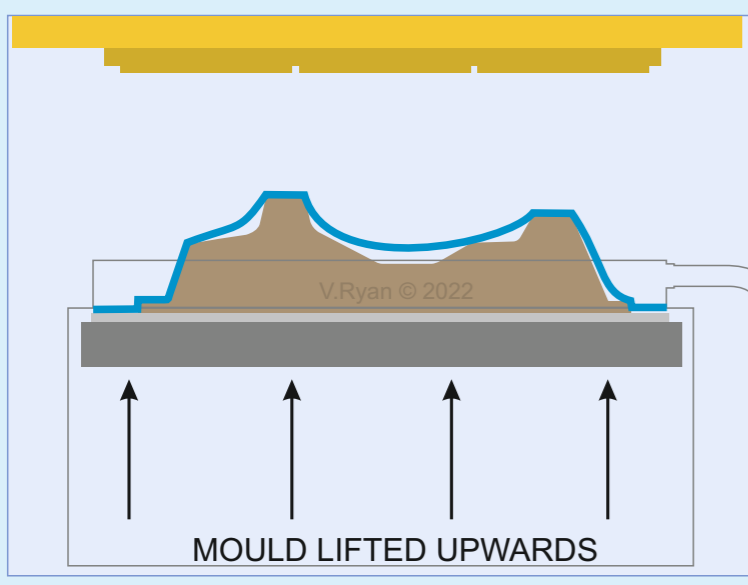


STAGE TWO
HEAT TURNED OFF.
MOULD LIFTED UPWARDS,
PRESSING INTO THE ACRYLIC

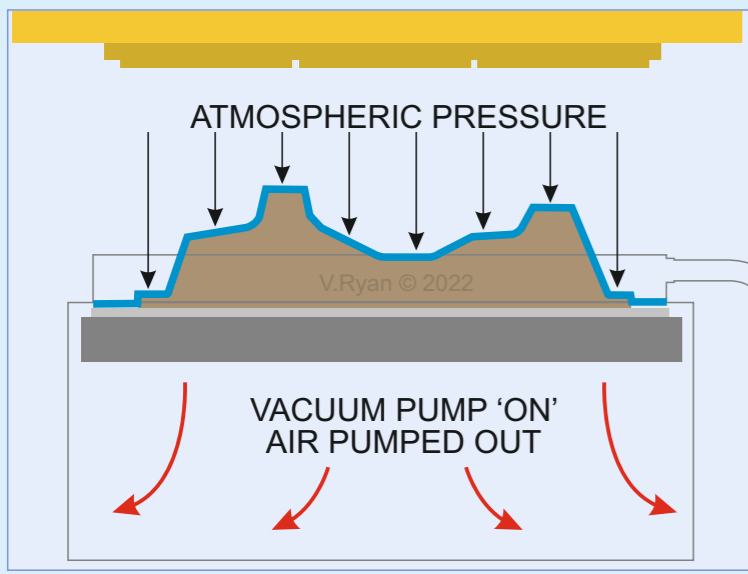

STAGE THREE
VACUUM PUMP TURNED ON,
REMOVING AIR UNDERNEATH
THE MOULD. ATMOSPHERIC
PRESSURE FORCES ACRYLIC
TIGHTLY AROUND THE MOULD.

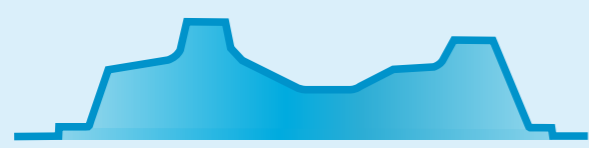

STAGE FOUR
ACRYLIC REMOVED FROM THE
MOULD, REVEALING ITS NEW
SHAPE / FORM.

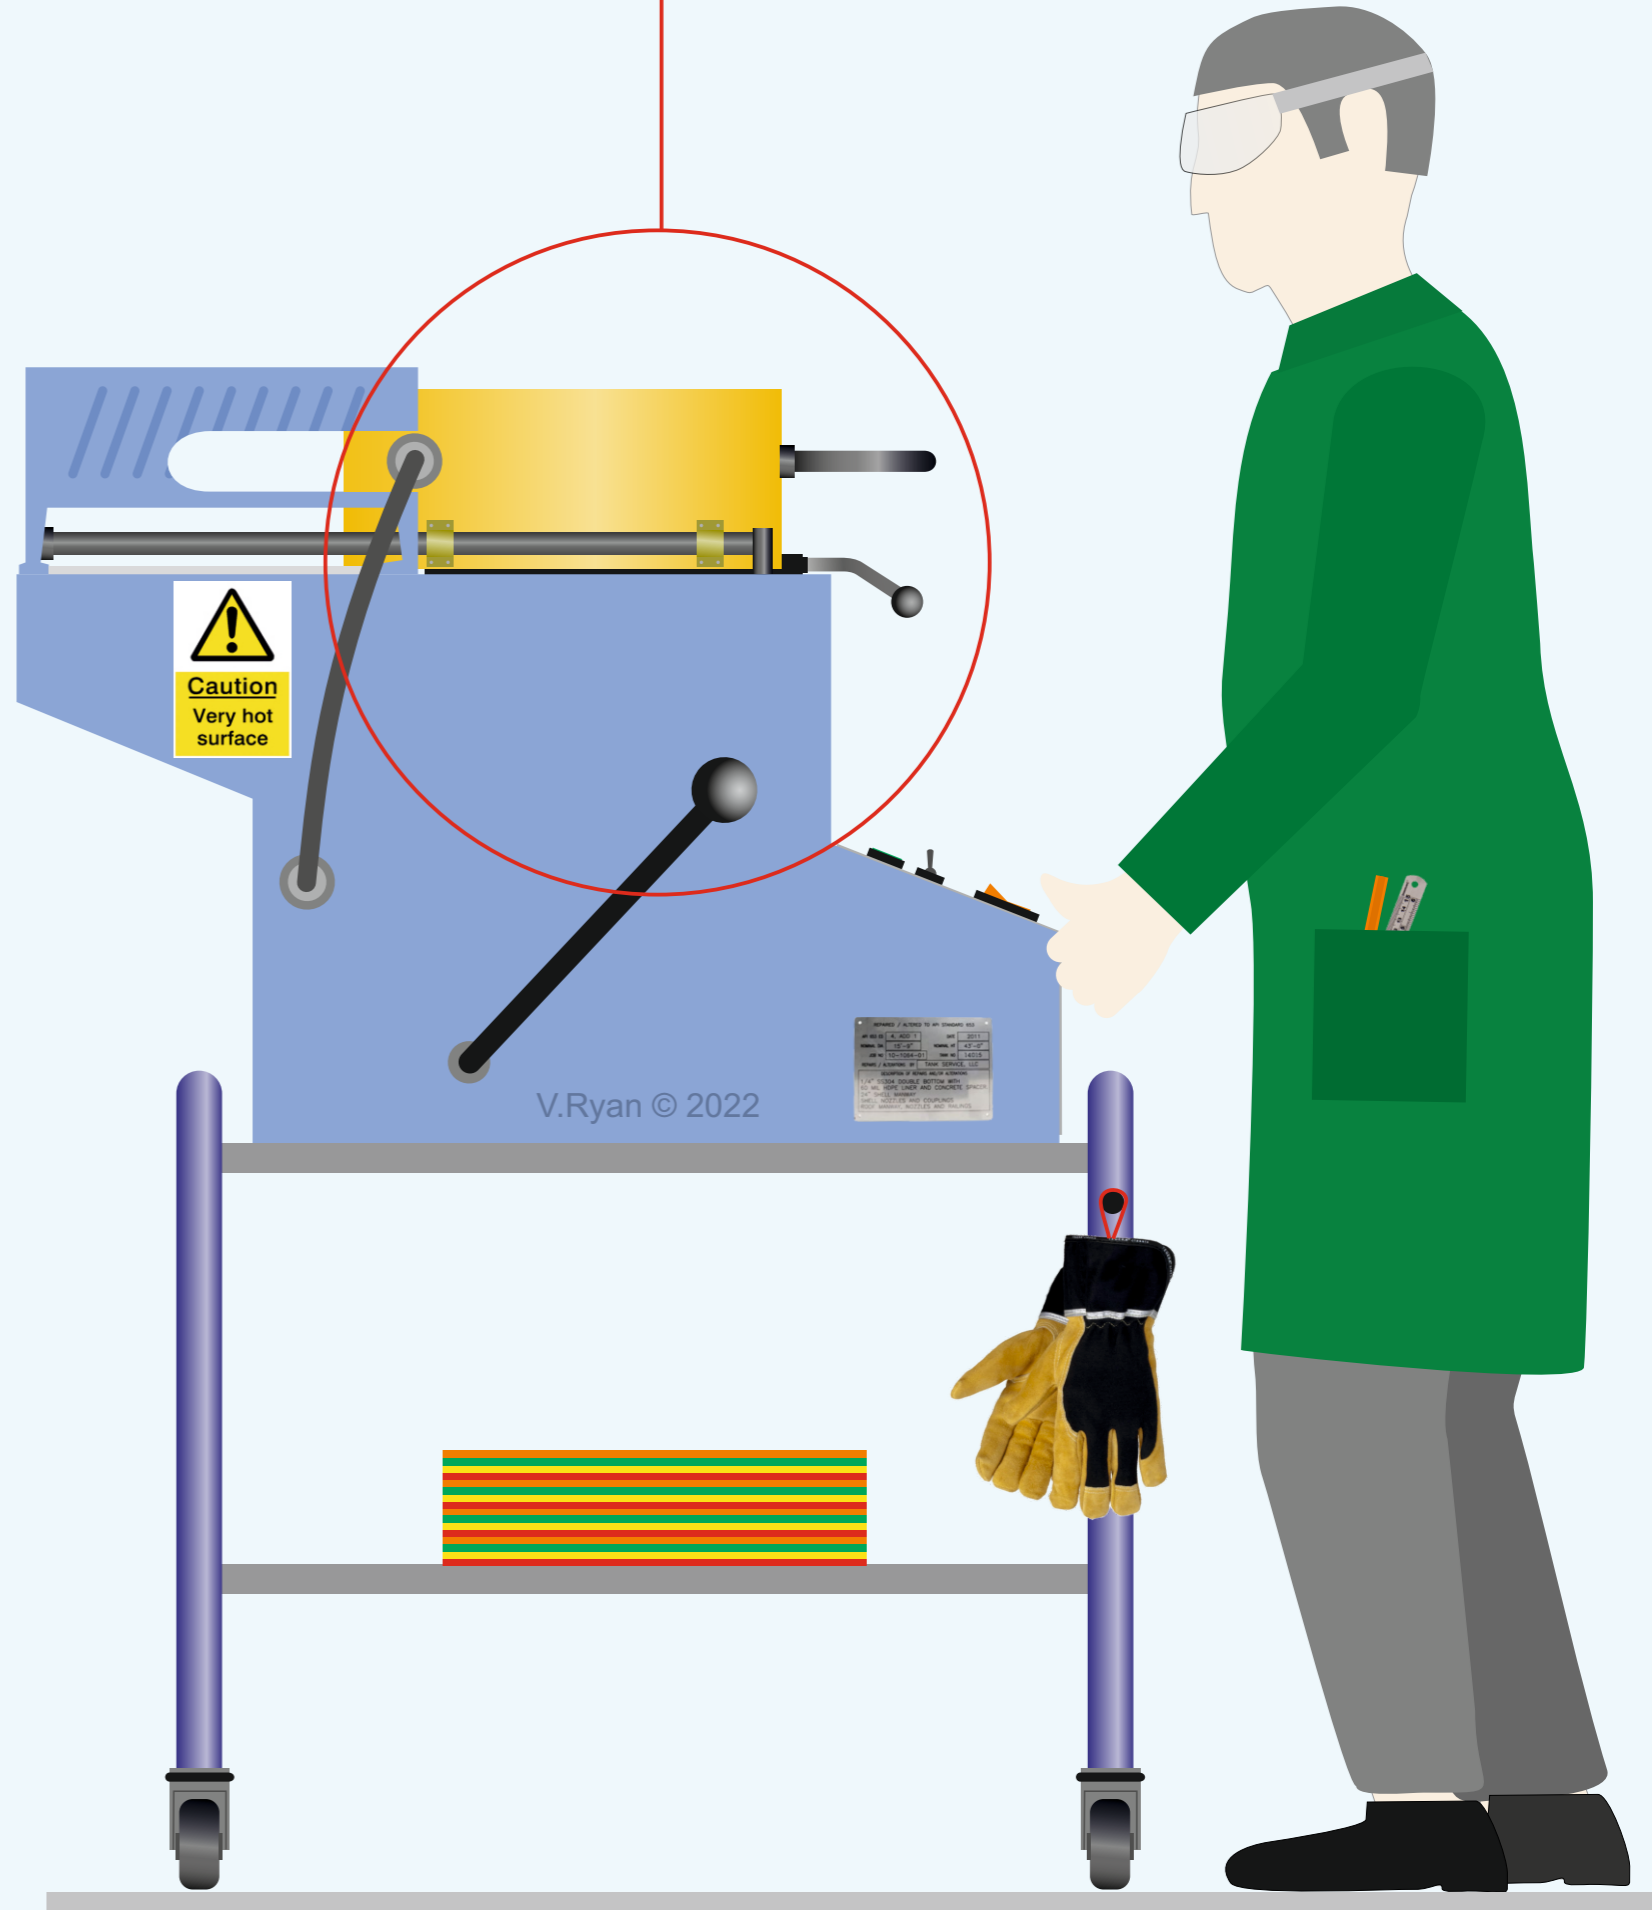

THE VACUUM FORMER

