
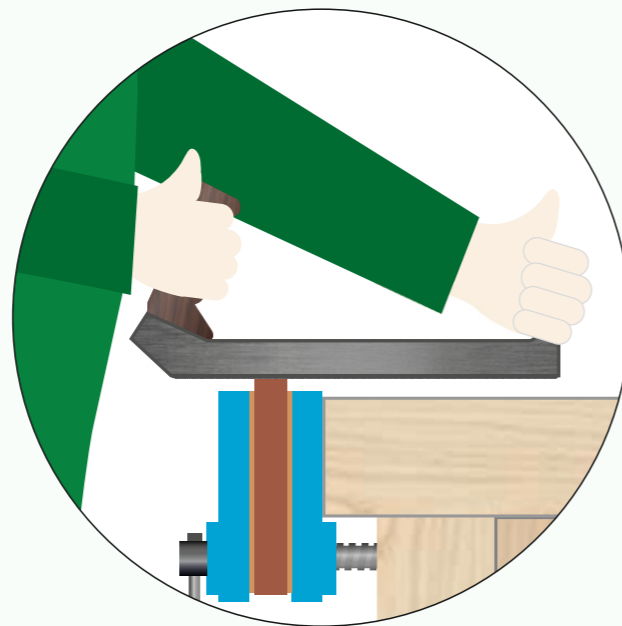
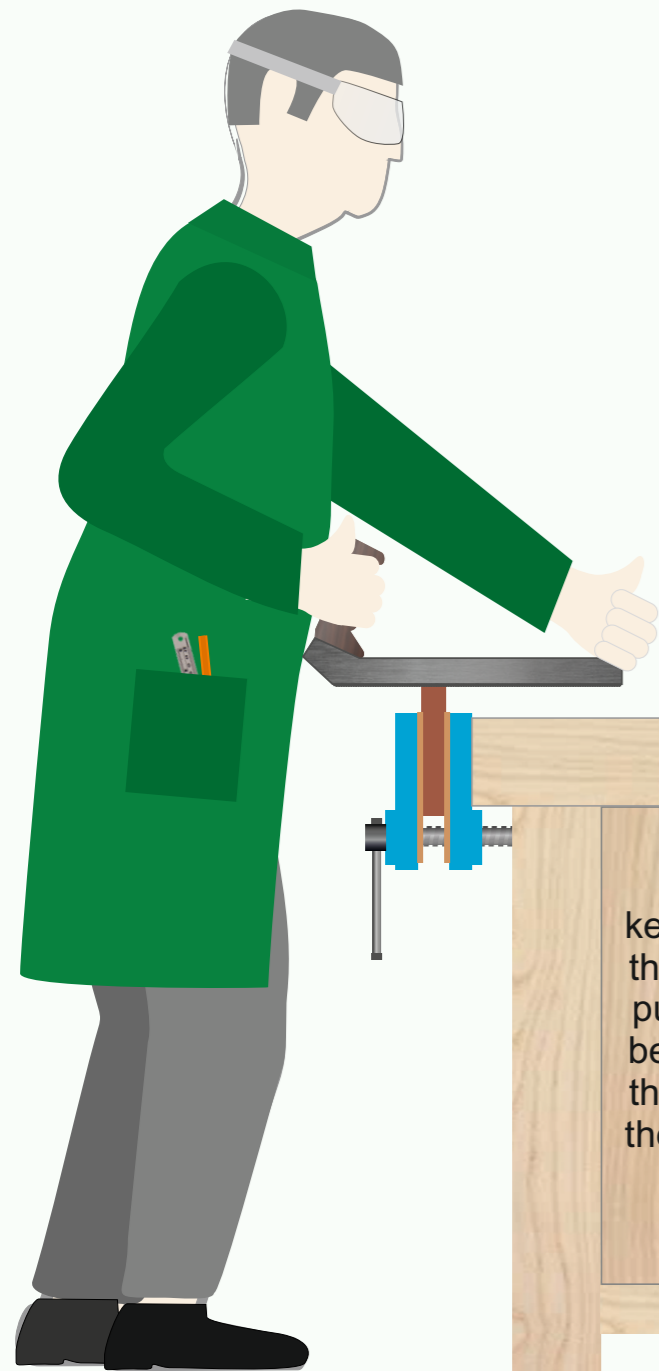


THE SURFORM




SURFORM FLAT FILE

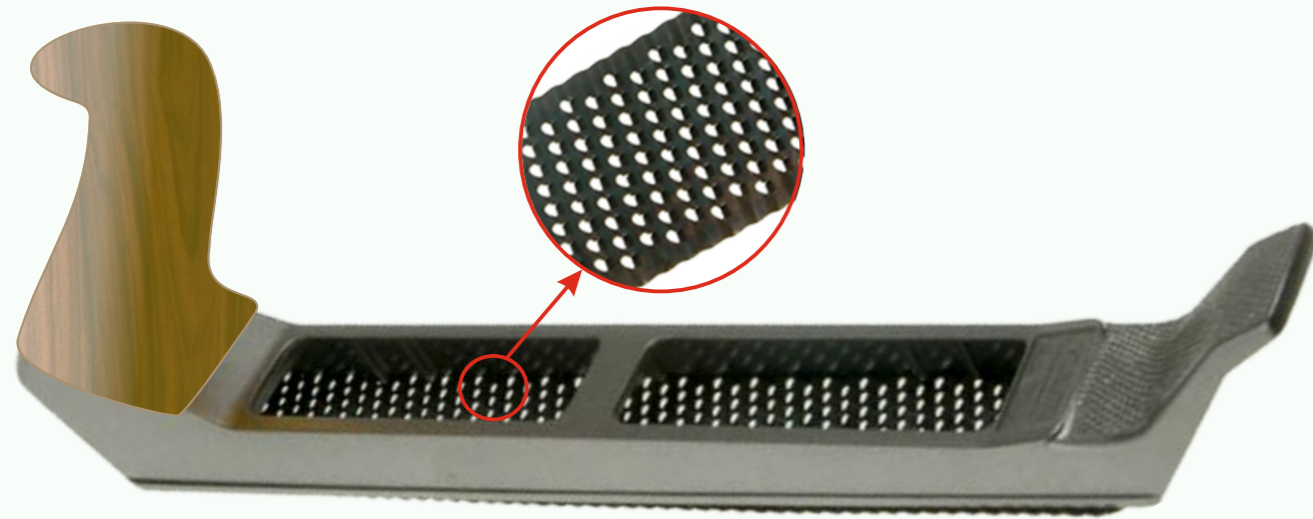

V.Ryan © 2022

Hold both handles and keep the blade flat, resting the blade on the work and push forward. Sometimes better progress is made, if the forward motion across the material, is at an angle / diagonal, not straight across.

SURFORM ROUND FILE

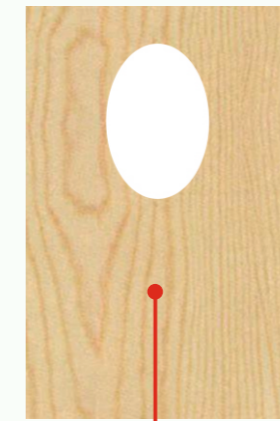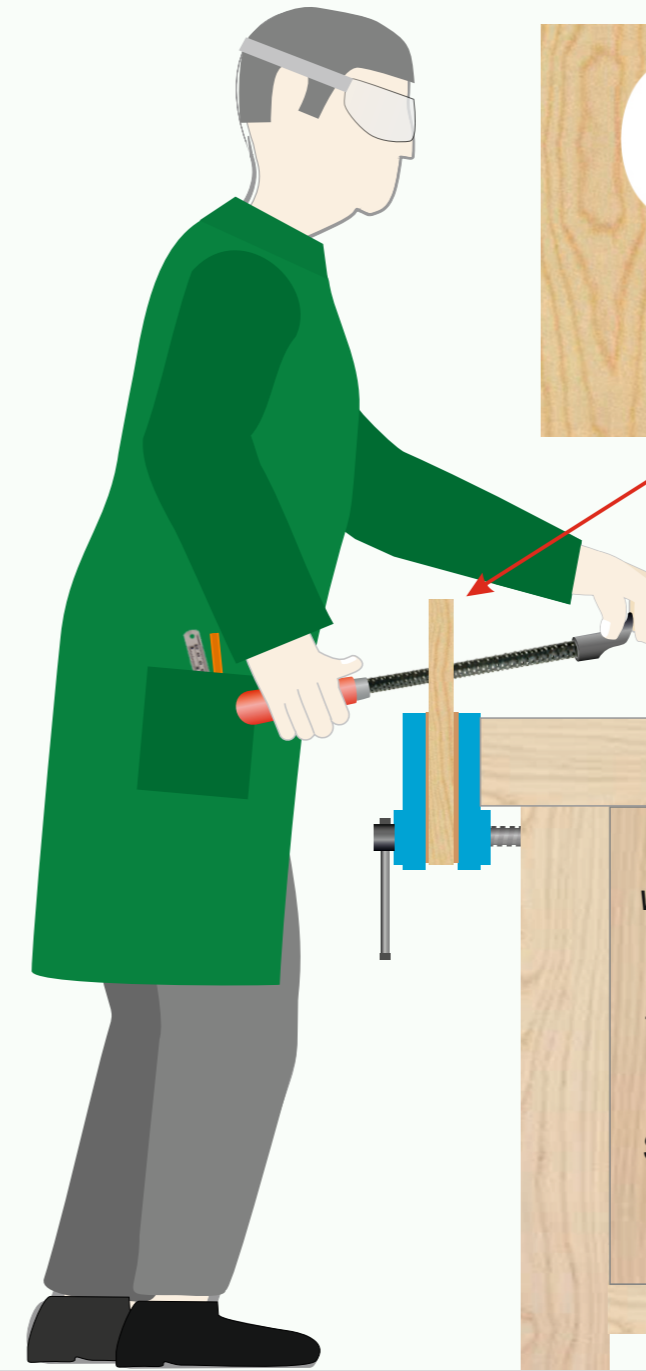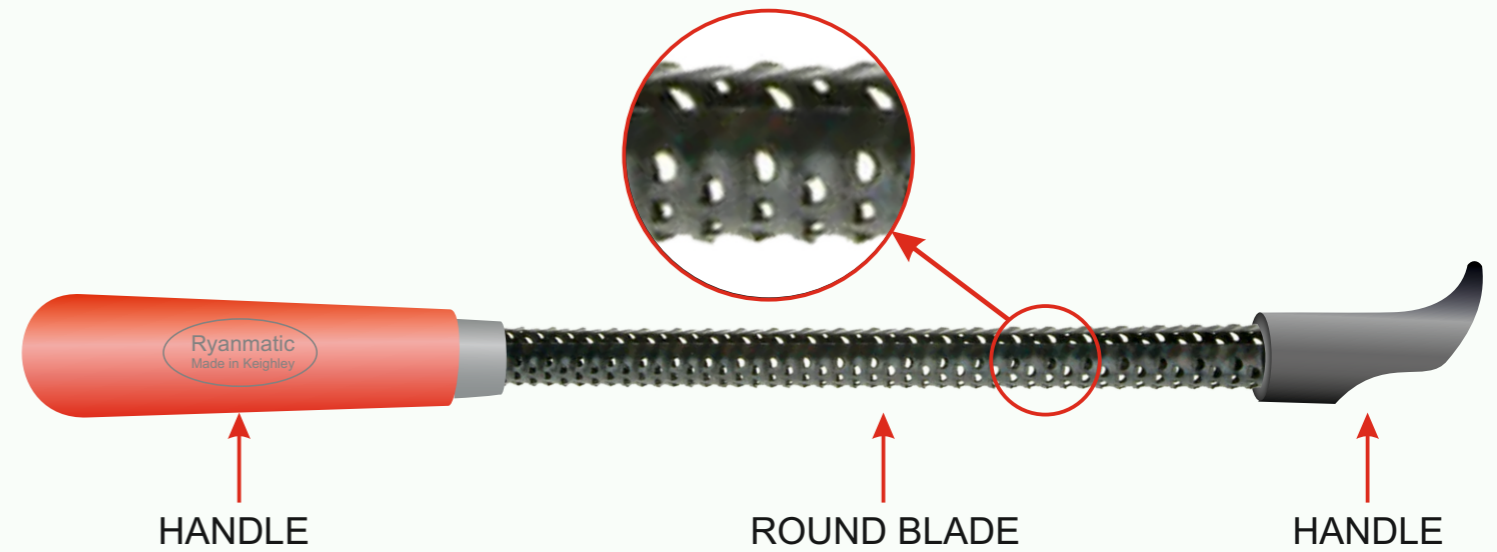

V.Ryan © 2022

To avoid splitting' the wood / edges of the hole:
'File' in an upwards motion from one side of the wood. Then, turn the wood round in the vice and file upwards again. Slowly 'level' the surform and finish with a file, followed by glasspaper.